
8 Ports PoE Ethernet Switch User Manual

8 ports PoE Ethernet Switch is a security surveillance Ethernet Switch which aims at Ethernet high definition surveillance and Ethernet project security system. The product fully combines the characteristics of security surveillance, provides fast packet forwarding ability and abundant backplane bandwidth, which ensures clear image and fluent transmission. ESD and surge protection circuit can improve product stability. The product supports one key CCTV model, enable to achieve VLAN, control the Net storm, protect the information security, prevent the viral transmission and Ethernet attack, fully satisfy the needs ofEthernet video security surveillance system and Ethernet project.

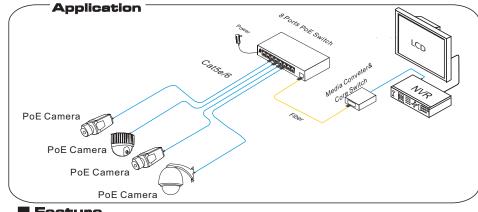

Feature

- Major ports: Provide 8x10/100Base-TX Ethernet ports(PoE), 1x100Base-X(SFP);
- One key CCTV mode; 1 ~ 8 downlink ports can only communicate with uplink ports; Restrain network storm under 3Mbps;Extend downlink ports transmission distance to 250m;
- Power input: DC48V ~ 57V;
- Standard: Meet IEEE802.3 、IEEE802.3u、IEEE802.3 af/at standards, PoE use End-Span, the spare cable can be used for other purposes;
- Protection: Excellent anti-thunder, anti-static and anti-interference ability;
- Appearance: Delicate design and easy installation, configure the anti-theft lock hole, guard against theft;
- Operation: Plug and Play, No Setting required.


<u> Notice</u>

The transmission distance is related to the connected cable. We suggest standard Cat5e/6 network cable, so the transmission distance can up to further distance!

8 Ports PoE Ethernet Switch

Board Diagram

VerB 1.0

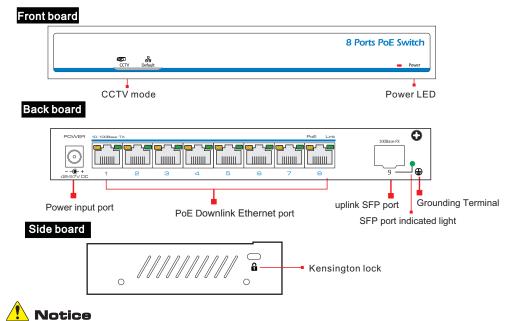

1) Device must be connected with lightning protection grounding; otherwise protection

level will reduce; please use above No.20 wire to connect the grounding terminal.

 Turn the dial switch for left, the equipment can enter surveillance module after providing equipment power.

📕 Installation step

Please check the following items before installation, if it is missing, please contact the dealer .

| • | 8 ports PoE Ethernet Switch | 1pc |
|---|-----------------------------|-----|
| • | Power adaptor | 1pc |
| • | AC power cable | 1pc |
| • | User manual | 1pc |

Please follow below the installation steps

1) Please turn off the signal power and display device power before installation, installation with power will damage the transmission equipment;

2) Use network cable connect PoE IP camera and 1 ~ 8 downlink ports of product respectively;

- 3) Use a network cable connect equipment uplink port and NVR or computer;
- 4) Connect power adapter;
- 5) Check if the installation is correct, equipment is in good condition, the connection is stable, then provide power for system;
- 6) Ensure the Ethernet equipment with power and work properly.

Specification

| Item | Description |
|------------------------|--|
| Downlink Ports | 8x10/100Base-TX Ethernet Ports(PoE) |
| Uplink Ports | 1x 100Base-X (SFP) |
| Network Standard | IEEE 802.3/802.3u/IEEE802.3x |
| Switch Capacity | 1.8Gbps |
| Packet Forwarding Rate | 1.34Mpps |
| Exchange Type | Storage&Fowarding |
| Buffer | 768k |
| MAC Address List | 2К |
| PoE Standard | 802.3af/at(PSE) |
| PoE Mode | End-span |
| PoE Power Supply | 1/2(+) , 3/6(-) |
| PoE Output | Single PoE Output≤30W(54V DC), Whole machine PoE output≤120W |
| CCTV Mode | 1. Downlink ports only communicate with uplink ports |
| | 2.Extend transmission distance to 250m(Downlink Ports) |
| | 3.Bandwidth:10Mbps(Downlink Ports) |
| Surge Immunity | 6KV : IEC61000-4-5 |
| ESD Protection | Contact discharge 6K, Air discharge 8KV, Per: IEC61000-4-2 |
| Voltage Input | DC 48V~57V |
| Power Consumption | <5W |
| Operation Temperature | -10℃~+55℃ |
| Storage Temperature | -40°C~+85°C |
| Operation Humidity | 5%-95%(Non-condensing) |
| Dimensions(LxWxH) | 200mm×101.8mm×27mm |
| Material | Metal |
| Weight | 500g |

Specification change will not be noticed

Troubleshoot


Please follow this step if the equipment have trouble.

- Make sure the equipment is installed according to the manufactures installation guide.
- Confirm RJ45 cable order meet EIA/TIA568A or 568B standard.
- Every PoE port can provide PoE equipment maximum power less than 30W, please do not connect the PoE equipment with power over 30W.
- Replace the equipment that can not work with a proper functioning 8port PoE Ethernet switch to check if the equipment is damaged.
- Please contact your vendor if trouble still exists.

Plug Producing Method

Instruments to be used: wire crimper, network tester. Wire sequence of RJ45 plug should conform with EIA/TIA568A or 568B.

- 1) Please remove 2cm long the insulating layer, and bare 4 pairs UTP cable;
- 2) Separate the 4 pairs UTP cable and straighten them;
- 3) Line up the 8 pieces of cables per EIA/TIA 568A or 568B;
- 4) Cut off the cables to leave 1.5cm bare wire;
- 5) Plug 8 cables into RJ45 plug, make sure each cable is in each pin;
- 6) Use the wire crimper to crimp it;
- 7) Repeat above 5 steps to make the another end;
- 8) Using network tester to test the cable if it works.

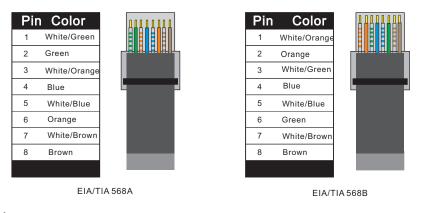

🚺 Notice

When choose RJ45 make sure if one end is EIA/TIA568A, the other end should also be EIA/TIA568A. When choose RJ45 make sure if one end is EIA/TIA568B, the other end should also be EIA/TIA568B.