

User's Guide to the FHP2

Optical Power Meter

User's Guide to the FHP2

Optical Power Meter



1 Introduction

The FHP2 series are full featured palm sized optical power meters designed for use with an optical laser source to perform optical loss measurements on optical fiber cables. The FHP2 series are lightweight and are controlled by microprocessor. Utilizing state-of-the-art SMT in its manufacture, optical connections to the FHP2 are made via the universal adapter interface on the top of the unit. The instrument has 6 working wavelengths to totally satisfy your needs.

It can be extensively used in telecommunication projects and other situations where optical power of wavelengths close to infrared ray needs to be measured.

2 Warranty

Three Years Limited Warranty

Grandway products are warranted against the defective components and workmanship for a period of three years from the date of delivery to the original customer. Any product found to be defective within the warranty period would be returned to Grandway authorized service center for repair, replacement and calibration.

Exclusions

The warranty on your equipment shall not apply to defects resulting from the following:

- Unauthorized repair or modification
- Misuse, negligence, or accident

Returning Product

To return product, you may contact Grandway to obtain additional information if necessary.

To serve you better, please specify the reasons for the return.

All delivery and mails should be sent to the following address:

Grandway Customer Service
6F, Xin'an building No. 99 Tianzhou Road
Shanghai, 200233 P.R. China

Contacting Us

Tel: 0086-21-54451260/61/62/63

Fax: 0086-21-54451266

E-mail: heyong@grandway.com.cn

or

overseas@grandway.com.cn

Website: www.grandway.com.cn

3 Safety Information

Warnings!

- Never look directly into optical outputs or a fiber while the equipment is on. Invisible laser beam may damage your eyes.
- Do not short-circuit the terminal of AC adapter / charger and the batteries. Excessive electrical current may cause personal injury due to fumes, electric shock or equipment damage.
- Connect AC power cord with the equipment and wall socket properly. While inserting the AC plug, make sure there is no dust or dirt on the terminals and both plugs are fully seated. Incomplete engagement may cause fuming, electric shock or equipment damage and may result in personal injury.
- Do not operate the equipment near hot objects, in hot environments, in dusty/ humid atmosphere or when condensation is present on the equipment. This may result in electric shock, product malfunction or poor performance.

4 Preparing for Operation

4.1 Unpacking the instrument

Packing material

We suggest that you keep the original packing material. Using the original packing material is your guarantee of protecting the instrument during transit.

Checking the package contents

The standard accessories of FHP2 are as follows:

- Main unit
- Quality Check Report
- Carrying Case
- User's Guide
- 2*1.2-volt Ni-MH Batteries


Optional accessories: AC Adapter

Checking for damage in transit

After unpacking the instrument, check to see whether it was damaged in transit. This is particularly likely if the outer casing is clearly damaged. If there is damage, do not attempt to operate the instrument or to repair it without authorization. Doing so can cause further damage and you may lose your warranty qualification.

4.2 Discharged batteries

There is a battery indicator on the screen to show the remaining charge. There are four possibilities the indicator may show, full, with 2 blacks, with 1 black and empty. If an empty battery indicator flashes it means the power is almost out, and that is when you should recharge the batteries by connect the AC adapter with the instrument. If the discharged batteries get to their limitations after long-time use, please replace it with a new one. To replace the batteries, please remove the battery plate on the back of instrument with a screwdriver.



When the battery charge is extremely low to supply the necessary power, the instrument will automatically switch off.

Note: 1 The AC indicator is not displayed when power is supplied by battery.


2 To eliminate the possibility of acid leakage, please take out the battery if the unit is not used for a long time.

4.3 AC operation

If the instrument is mainly used at one location, e.g. in a laboratory or test department, the AC adapter can be used to power it instead of batteries. There is a DC input jack on the top side of the F2HP instrument casing into which the output cable of the AC adapter is plugged. And when the AC adapter is plugged in, the AC Indicator on the LCD will be displayed.

Note:

- 1 Power is supplied by the AC adapter even if battery is fitted. And the battery indicator is not displayed on the screen when AC adapter is plugged.
- 2 Make sure that the operating voltage of the AC Adapter / Charger is the same as the local AC line voltage.



5 Specifications

Optical Specifications

Model	FHP2A02/FHP2A04	FHP2B02/FHP2B04
Measuring Range (dBm)	-70~+10	-50~+26
Resolution	0.01dB/dBm; 0.0001uW	
Calibration Wavelength (nm)	850/1300/1310/1490/1550/1625	
Detector	InGaAs	
Precision	±5% ^①	
Operating Wavelength (nm)	700~1700	
Power	2*1.2V Ni-MH batteries; AC adapter for continuous use	
Wavelength Recognize ^②	Yes	
Tone Detection (Hz) ^③	Yes	
Back Light	Yes	
Auto Power Off	Yes	
Reference Value	Yes	
Connector	FC/SC/ST interchangeable connectors for PC and APC	
USB and software support	Available for FHP2A04	Available for FHP2B04
Data Storage	999 records for FHP2A04 & FHP2B04	

- Note**
- ① ±5% is effective under 1550nm, CW, 23°C±3°C, humidity≤70%
 - ② Input power >-40dBm for FHP2A04; Input power>-20dBm for FHP2B04.
Input power >-40dBm for FHP2Aseries; Input power>-20dBm for FHP2Bseries.

General Specifications

Operation Temperature	-10°C~+50°C
Storage Temperature	-20°C~+70°C
Humidity	< 90%
Size(H*W*D)	160*76*45(mm)
Weight	about 265(g)

6 Operation

6.1 Display and controls

6.1.1 Keypad

The FHP2 keypad is used to access a wide range of instrument functions.







FHP2A/B02




NO.	Key	Function
1		Switches instrument on / off. Long keypress while powering on to activate the instrument without Auto-off function.
2		Selects measurement wavelength in sequence of 850nm,1300nm 1310nm, 1490nm,1550nm and 1625nm.
3		Switches measurement unit among dBm,dB and mw.
4		Short keypress to display reference level of present test wavelength. Long keypress to set a new reference level of present test wavelength.
5		Switches backlighting on / off.



FHP2A/B04

NO.	Key	Function
1	 >2s PERM ON OFF	Switches instrument on / off. Long keypress while powering on to activate the instrument without Auto-off function.
2		Selects measurement wavelength in sequence of 850/1300/1310/1490/1550/1625nm and to long keypress for 2s activate auto-wavelength recognition(TWIN).
3	 dBm/ dB/mw	Switches measurement unit among dBm, dB and mw.
4	 >2s SAVE LOAD	Long keypress for 2s to store the current test value; short keypress to display the record.
5	 >2s SET REF	Short keypress to display reference value of present test wavelength. Long keypress to set a new reference value of present test wavelength.
6		Switches backlighting on / off.

6.1.3 LCD

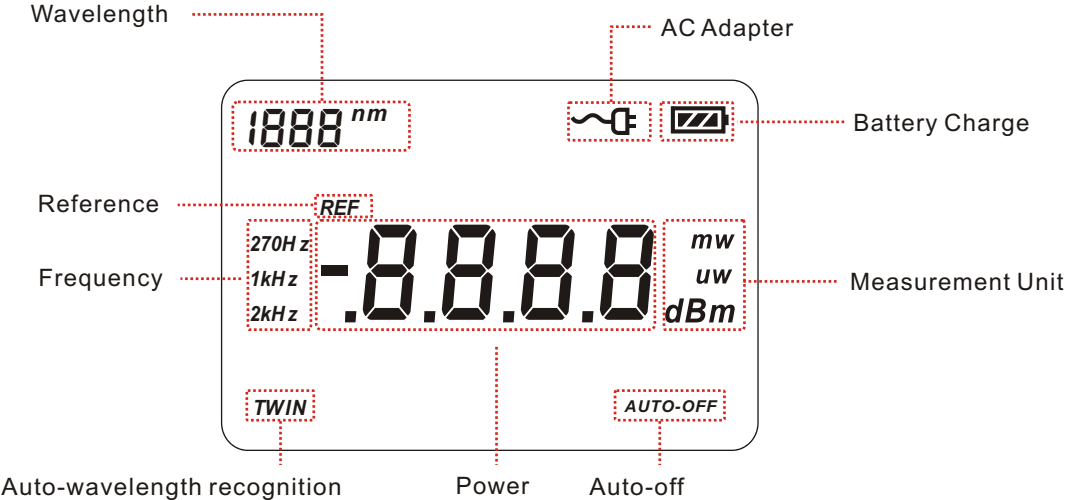

6.2 Turning the instrument on and off

Press the “ON/OFF” key briefly.

The instrument powers on.

Please check the battery capacity if it fails.

Press the “ON/OFF” key briefly again.

The instrument powers off.

Note: Auto-off function


1. The instrument powers off automatically if no keypress in 10 minutes.
2. Press the “ON/OFF” key for about 2 seconds to power on the instrument with “Auto-off” function deactivated.





6.3 Setting the wavelength

Press the “λ” key repeatedly until the desired wavelength is displayed. You can select from six optional wavelengths: 850nm, 1300nm, 1310nm, 1490nm, 1550nm, 1625nm.

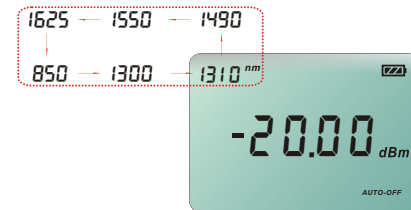The instrument defaults to the wavelength 1550nm.



6.4 Turning on the wavelength recognition function-- “TWIN” function

Long keypress  is to activate the auto-wavelength recognition and the "TWIN" will show on the LCD. Short keypress  is to close the "TWIN".

When used with the FHS2 Series optical laser source, the wavelength will shift automatically according to the output wavelength of the laser source




6.5 Switching measurement mode

There are three measurement units you can choose by pressing the “dBm/dB/mW” key repeatedly, dB, dBm, mW.


6.6 Setting reference value

1. Press the “REF” key to display the stored reference value for the current wavelength and a sign of “REF” will be displayed on the screen to indicate that it is a reference value. The displayed value only lasts 1 second.

2. Press and hold the “REF” key over 2 seconds to store the presently measured value as the new reference value for the current wavelength. During the process the “REF” sign flashes twice on the screen and buzzer sound is heard. Once the new reference level is set, the FHP2 switches to the dB measurement mode. The displayed value only lasts 1 second.


Note: 1. Long keypress  for over 2 seconds, the unit will be shifted to "dB" automatically.

2. When the input laser power is modulated laser source, it will affect the setting of REF value. Please guarantee the input laser source is CW laser when setting REF value.

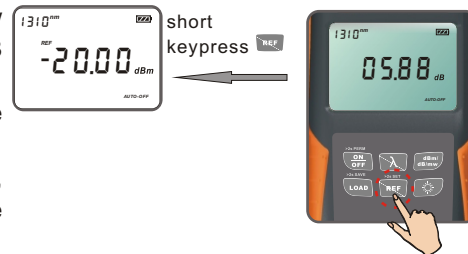

6.7 Switching backlighting of the LCD on and off

Press the backlighting key.
Backlighting switches on.
Press the backlighting key again.
Backlighting switches off.

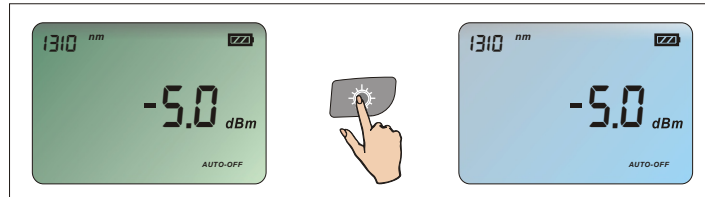

6.8 Frequency detecting

If the tested wavelength is carrying a tone of 270Hz, 1kHz, or 2kHz,
the respective frequency indicates on the screen



6.9 The overflow of the measured power value


If the measured power value is too high, the LCD screen will display "HI".



If the measured power value is too low, the LCD screen will display "LO".




6.10 The storage of the current test value(For FHP2A04 and FHP2B04)

Press  key over 2s, the SAVE flashes on the screen once with the sounds of the buzzer. It indicates the setting is finished. It will display the stored value and the serial number of the storage. Then, the FHP2A will return to the test state automatically.


6.11 Check the storage records(For FHP2A04 and FHP2B04)

Press  key, it will display the latest record.


Press  key, it will browse the forward records.

Press  key, over 2s, it will browse the forward 20 record.

Press  key, it will browse the afterward records.

Press  key, over 2s, it will the afterward 20 record.

Press  key, it will delete current record.

Press  key over 2s, it will delete alls record.



7 Maintenance

- Please disconnect the AC adapter/charger and cover the protective dust cap once you finish using.
- It is a good idea to clean the connector and the instrument when they get dirty through use. Optical cleaning pads and anhydrous alcohol is recommended. And please be careful not to get the detergent inside the instrument.
- To ensure the measurement accuracy, please send the instrument to Grandway Service Center for calibration once a year.

NOTE: Specifications, terms and conditions are subject to change without notice.

©Copyright 2006 Grandway. All rights reserved.

Grandway and its logo are trademarks of Grandway.

Printed in China.